

56794_ WIRING DIAGRAM CL7

DESCRIPTION

1. System general ground
2. Starting relay
3. Oil indicator light
4. +12V
5. Security relais
6. Starting switch
7. Charge regulator fuse
8. Services fuse
9. Neutral security switch
10. Seat security switch
11. Engine
12. Chassis ground
13. PTO security switch
14. Chassis ground
15. Hour-meter